

# LEDGER STONE – CORNER PANEL INSTALLATION

## SUBSTRATE REQUIREMENTS

For best bonding results, the surface should be clean, dry, and have open pores for adhesion. Smooth, non-porous or polished surfaces should be avoided to adhere to. Interior installations of Ledger Stones could be installed on gypsum drywall or exterior grade plywood for up to 10' in height. Cement board is recommended for interior walls exceeding 10' in height. For exterior applications, LEDGER STONE can be installed directly onto brick, masonry block, cured concrete, or cement board.


## MORTAR RECOMMENDATION

For all installations, a polymer modified mortar is recommended. For commercial installations, as well as exterior installations over 10' in height, a polymer mortar with a latex additive is strongly recommended.


## CORNER PANEL INSTALLATION

Please follow below steps to achieve a natural hand stacked appearance:


1. Corner panels are used to finish outside corners with natural edges. Inside corners should be mitered from plain panels.

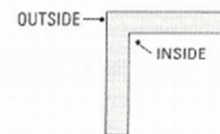


2. Corner panels have natural rock faced ends on both sides and are shaped as shown. They are 24" long and 6" high with approximately one square foot coverage.

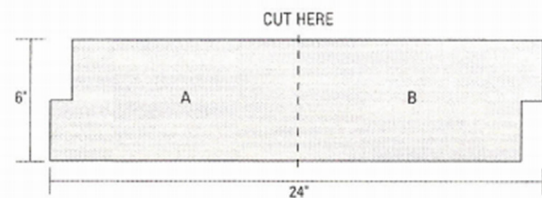

3. Corner panels should be cut into two pieces at desired length and finger joined around the outside corner as shown. One corner panel is needed to complete on linear foot of outside corner.

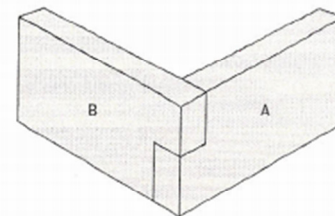

4. Continue installation by removing one staggered end of the plain ledger stone piece and place adjacent to the installed corner piece to continue same row.

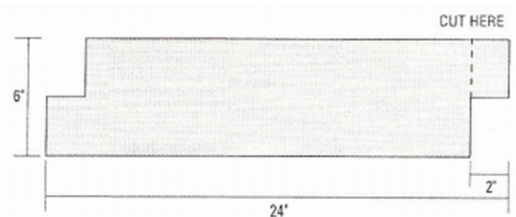

5. Alternate the size of the corner pieces to help stagger the joints. Do not stagger in a brick fashion, but randomly alter the size to conceal the joint patterns.

